

# **HP StorageWorks Disk Array XP1024 site preparation guide**

third edition (April 2004)

part number: A7906-96009

This guide describes how to prepare a site for the installation of an HP Disk Array XP1024.



© Copyright 2002-2004 Hewlett-Packard Development Company, L.P., all rights reserved

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information contained in this document is subject to change without notice.

HP-UX is a registered trademark of Hewlett-Packard Company.

All other product names mentioned herein may be trademarks of their respective companies.

Hewlett-Packard Company shall not be liable for technical or editorial errors or omissions contained herein. The information is provided "as is" without warranty of any kind and is subject to change without notice. The warranties for Hewlett-Packard Company products are set forth in the express limited warranty statements accompanying such products. Nothing herein should be construed as constituting an additional warranty.

Printed in the U.S.A.

*HP StorageWorks Disk Array XP1024: Site Preparation Guide*

third edition (April 2004)  
part number: A7906-96009

About this guide	5
Intended audience	5
Related documentation	5
Conventions	5
Getting help	6
HP technical support	6
HP storage website	7
HP authorized reseller	7
Revision history	8
Warranty statement	9

## **1 Introduction 11**

## **2 Site prep team and tasks 13**

The site prep team	14
Site prep technical tasks	16
Site planning timetable	18

## **3 Preparing for installation 19**

Safety requirements	20
General computer room requirements	21
Physical requirements	24
HP Disk Array XP512 DKU physical requirements	27
Service and cable routing space requirements	29
Data comm requirements	36
Phone Home with Continuous Track	36
HP StorageWorks Command View XP and your public Intranet	37
Outside phone line	37

Electrical requirements	38
Line voltage	38
Branch Circuit Breakers	39
Frequency	39
AC line voltage requirements for the HP Disk Array XP1024 DKC	40
AC line voltage requirements for the HP Disk Array XP1024 DKU	43
Safety and dedicated ground	48
Grounding requirements	48
Receptacles	49
Power line transients	51
Maximum peak inrush and crest factor	52
Sources of electrical interference	53
Three-phase AC cabling for the USA (60 Hz)	55
Connecting the external power supply cords	55
Branch circuit requirements	57
Three-phase AC cabling for Europe (50 Hz)	58
Connecting the power supply cords	58
Branch circuit requirements	59
Single-phase AC cabling for USA	61
Connecting the power-supply cords	61
Branch circuit requirements	64
Single-phase cabling for europe	65
Connecting the power supply cords	65
Branch circuit requirements	66
Uninterruptible Power Supply (UPS)	67
UPS features	67
UPS limitations	67
Power requirements: single secondary input (primary offline)	68
Reference supplier information	68
Environmental requirements	69
Heat dissipation and power consumption	74
Altitude	75
Acoustics	76
Delivery space requirements	77
<b>4 Upon receipt of your HP Disk Array XP1024</b>	<b>79</b>
Checking for shipping shortage and damage	80
Unpacking the cartons	81
<b>Glossary</b>	<b>83</b>

---

# About this guide

This guide describes how to prepare a physical site for the installation of an HP Disk Array XP1024. For information about the operation of the HP Disk Array XP1024, refer to the owner's guide.

## Intended audience

This guide is intended for use by anyone participating in preparing a site for HP Disk Array XP1024 installation. Your purchase of an HP Disk Array XP1024 includes an onsite consultation visit by your HP support representative. Address your questions to the HP support representative at the consultation.

## Related documentation

HP provides the following related documentation:

- *HP StorageWorks Disk Array XP1024: Owner's Guide*
- *HP StorageWorks Command View XP for XP Disk Arrays: User Guide*

For information about operating system commands and third-party products, refer to the manufacturer's documentation.

## Conventions

This guide uses the following text conventions.

**Figure 1** Blue text represents a cross-reference. For the online version of this guide, the reference is linked to the target.

[www.hp.com](http://www.hp.com) Underlined, blue text represents a website on the Internet. For the online version of this guide, the reference is linked to the target.

<b>literal</b>	Bold text represents literal values that you type exactly as shown, as well as key and field names, menu items, buttons, file names, application names, and dialog box titles.
<i>variable</i>	Italics indicates that you must supply a value. Italics is also used for manual titles.
input/output	Monospace font denotes user input and system responses, such as output and messages.
<i>Example</i>	Denotes an example of input or output. The display shown in this guide may not match your configuration exactly.
[ ]	Indicates an optional parameter.
{ }	Indicates that you must specify at least one of the listed options.
	Separates alternatives in a list of options.

## Getting help

If you still have a question after reading this guide, contact an HP authorized service provider or access our website:

[www.hp.com](http://www.hp.com)

## HP technical support

In North America, call technical support at 1-800-652-6672, available 24 hours a day, 7 days a week.

Outside North America, call technical support at the nearest location. Telephone numbers for worldwide technical support are listed on the HP website under support:

<http://h18006.www1.hp.com/storage/arraysystems.html>

Be sure to have the following information available before calling:

- technical support registration number (if applicable)
- product serial numbers
- product model names and numbers
- applicable error messages
- operating system type and revision level
- detailed, specific questions

For continuous quality improvement, calls may be recorded or monitored.

## HP storage website

For the most current information about HP StorageWorks XP products, visit the support website. Select the appropriate product or solution from this website:

<http://h18006.www1.hp.com/storage/arraysystems.html>

For information about product availability, configuration, and connectivity, consult your HP account representative.

## HP authorized reseller

For the name of your nearest HP authorized reseller, you can obtain information by telephone:

United States      1-800-345-1518

Canada              1-800-263-5868

Or contact:        [www.hp.com](http://www.hp.com)

---

## Revision history

May 2002	First edition
October 2002	Second edition
April 2004	Third edition



---

## Warranty statement

HP warrants that for a period of ninety calendar days from the date of purchase, as evidenced by a copy of the invoice, the media on which the Software is furnished (if any) will be free of defects in materials and workmanship under normal use.

**DISCLAIMER. EXCEPT FOR THE FOREGOING AND TO THE EXTENT ALLOWED BY LOCAL LAW, THIS SOFTWARE IS PROVIDED TO YOU “AS IS” WITHOUT WARRANTIES OF ANY KIND, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. HP SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT, TITLE, ACCURACY OF INFORMATIONAL CONTENT, AND FITNESS FOR A PARTICULAR PURPOSE.** Some jurisdictions do not allow exclusions of implied warranties or conditions, so the above exclusion may not apply to you to the extent prohibited by such local laws. You may have other rights that vary from country to country, state to state, or province to province.

**WARNING! YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE IS AT YOUR SOLE RISK.** HP DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED, VIRUS-FREE OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE SOFTWARE IS ASSUMED BY YOU. HP DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE OR RELATED DOCUMENTATION IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY HP OR HP’S AUTHORIZED REPRESENTATIVES SHALL CREATE A WARRANTY.

**LIMITATION OF LIABILITY.** EXCEPT TO THE EXTENT PROHIBITED BY LOCAL LAW, IN NO EVENT INCLUDING NEGLIGENCE WILL HP OR ITS SUBSIDIARIES, AFFILIATES, DIRECTORS, OFFICERS, EMPLOYEES, AGENTS OR SUPPLIERS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, PUNITIVE OR OTHER DAMAGES (INCLUDING LOST PROFIT, LOST DATA, OR DOWNTIME COSTS), ARISING OUT OF THE USE, INABILITY TO USE, OR THE RESULTS OF USE OF THE SOFTWARE, WHETHER BASED IN WARRANTY, CONTRACT, TORT OR OTHER LEGAL THEORY, AND WHETHER OR NOT ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Your use of the Software is entirely at your own risk. Should the Software prove defective, you assume the entire cost of all service, repair or correction. Some jurisdictions do not allow the exclusion or limitation of liability for incidental or consequential damages, so the above limitation may not apply to you to the extent prohibited by such local laws.

**NOTE.** EXCEPT TO THE EXTENT ALLOWED BY LOCAL LAW, THESE WARRANTY TERMS DO NOT EXCLUDE, RESTRICT OR MODIFY, AND ARE IN ADDITION TO, THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE LICENSE OF THE SOFTWARE TO YOU; **PROVIDED, HOWEVER,** THAT THE CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS IS SPECIFICALLY DISCLAIMED AND SHALL NOT GOVERN OR APPLY TO THE SOFTWARE PROVIDED IN CONNECTION WITH THIS WARRANTY STATEMENT.

---

# Introduction

The objective of a site prep is to prepare your site for the successful and timely installation of your HP Disk Array XP1024. Proper site preparation and maintenance is vital to the reliability of your HP Disk Array XP1024. A site prep is a delicate balance of equipment design criteria, site environmental variables, your business needs, and your budget constraints.

This guide contains site preparation information for the HP Disk Array XP1024. Other site preparation resources may also be available to you. Consult your HP representative specializing in the HP Disk Array XP1024.



---

## Site prep team and tasks

The HP service organization is committed to making sure you receive the maximum benefits of your HP Disk Array XP1024. Brief descriptions of the HP team and how they can assist you are included in this chapter. You are also an integral part of the site prep team. Your responsibilities are also described here. The table on [page 16](#) provides a site inspection checklist and includes a reference for pertinent information.

---

## The site prep team

The site prep planning team is responsible for determining site location and location size, ensuring that construction requirements and local codes are met, and scheduling all events related to site completion to prepare for the successful installation and maintenance of the HP Disk Array XP1024. The site prep team consists of the following personnel:

### **The HP Sales Representative (SR)**

The sales representative is your primary point of contact. A sales representative coordinates all the HP resources to ensure successful delivery and installation of your disk array.

### **The HP Customer Engineer (CE)**

The HP CE is trained and experienced in the installation of your disk array. He or she has the tools, parts, and knowledge to install and maintain your HP Disk Array XP1024. The CE also assists you in determining your site prep requirements.

### **The HP Application Software Engineer (ASE)**

The HP ASE is a software technical specialist trained in configuring your HP Disk Array XP1024. The ASE can install and configure all software applications for your disk array.

### **The Customer**

As part of the site prep planning team, your responsibilities include scheduling, planning, and preparing a suitable environment for the HP Disk Array XP1024. Your site team may include a site specialist for your computer room, a site electrician, and other site personnel specializing in your site computer room. Responsibilities include proper:

- Physical space necessary for proper disk array function and maintenance activity, including space and weight limitations and system accessibility

- Electrical power input including adherence to:
  - local building codes
  - local electrical codes
  - local safety codes
- Connectors and receptacles, including
  - hardware or cables
  - network links
  - telephone equipment
  - equipment supplied by companies other than HP
- Environmental requirements including:
  - temperature requirements
  - humidity limitations
- Floor ventilation areas
- Cable access holes
- RJ-11 analog telephone lines for Phone Home capabilities

---

## Site prep technical tasks

Use the following table as an action item checklist.

Customer Summary			
Customer:			
Contact: Telephone:			
Address: HP CE:			
Date: Time:			
Safety	Yes	No	Reference
✓ when completed			
<input type="checkbox"/> Is there a fire protection system in the computer room?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 20</a>
<input type="checkbox"/> Are there any equipment servicing hazards?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 20</a>
Computer Room	Yes	No	Reference
✓ when completed			
<input type="checkbox"/> Is there a copy of the existing floor plan?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 21</a>
<input type="checkbox"/> Is there a copy of the newly developed floor plan?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/> Is there adequate space for airflow and maintenance needs?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 21</a>
<input type="checkbox"/> Is the computer room structurally complete?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 21</a>
<input type="checkbox"/> Is the raised floor adequate for equipment loading?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/> Are there channels or cut-outs for cable routing?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/> Is antistatic flooring installed?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/> Is there a telephone jack for Phone Home configuration?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 36</a>
<input type="checkbox"/> Is there a telephone line for customer engineer use?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 37</a>
<input type="checkbox"/> Is there a private LAN available?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 37</a>



Electrical		Yes	No	Reference
✓ when completed				
<input type="checkbox"/>	Are two AC outlets (on different lines) available for the proposed equipment?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 38</a>
<input type="checkbox"/>	Does the input voltage correspond to equipment specifications?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 38</a>
<input type="checkbox"/>	Are the input circuit breakers adequate for equipment loads?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 38</a>
<input type="checkbox"/>	Does the input frequency correspond to equipment specifications?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 38</a>
<input type="checkbox"/>	Are lightning arresters installed?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 53</a>
<input type="checkbox"/>	Have all sources of electrical interferences been corrected?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 53</a>
Air-Conditioning		Yes	No	Reference
✓ when completed				
<input type="checkbox"/>	Can the temperature be maintained between 16° and 32° C?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 69</a>
<input type="checkbox"/>	Can temperature changes be held to less than 10°C per hour?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 71</a>
<input type="checkbox"/>	Can humidity level be maintained between 20% and 80% percent?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 71</a>
Building Access and Security		Yes	No	Reference
✓ when completed				
<input type="checkbox"/>	Is there access control to the computer room?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/>	Is there access control for the customer site?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/>	Are any stair-walkers, lifts, ramps, floor coverings, or ladders required to install the equipment? Define: _____	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/>	Will the equipment fit through all doors, corridors, and in lifts, both in size and weight?	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>
<input type="checkbox"/>	Does the building have a loading dock? Maximum access height is _____m.	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">page 29</a>

## Site planning timetable

The following guidelines can be used to monitor the progress of your preinstallation preparation. The time between placing an order to actual arrival can vary, and we recommend conferring with your HP representative to determine the best estimated delivery dates for preparation of your site.

The following are items that may require several weeks of lead time to complete:

- Acquiring required power connectors
- Arranging for an electrician
- Adding or modifying air conditioning
- Building alterations
- Placing an order for data comm equipment

Due to potential delays, we recommend that the suppliers of the listed services be contacted as soon as you have placed your order:

- Schedule the site planning visit with your HP CE to discuss questions concerning site planning.
- Select an appropriate location for the disk array and create a plan outlining the physical arrangement of the equipment, including related furniture.

---

# Preparing for installation

This chapter provides information for planning and preparing your site before and during installation of your HP Disk Array XP1024.

Before installing your HP Disk Array XP1024, your site data center computer room must meet the requirements described in this chapter.

---

# Safety requirements

The following sections contain information to help you properly prepare your facility for the arrival of your disk array.

## Site safety consideration

When making decisions concerning site safety, your first concern should be the safety of your personnel and then the safety of your equipment. Two major safety considerations for any computer site are fire safety and emergency power-off. If you have any questions on site safety, consult your HP CE, your insurance carrier, and local building inspectors for safety recommendations.

## Fire safety

When considering fire safety, consult your insurance carrier and fire department for suggestions and recommendations. They can analyze your existing fire control systems, and advise you of any changes that may be needed. If you are building a new site, or modifying an old site, consult your local building codes for fire prevention and protection guidelines. You can also consult your local HP CE and local fire inspectors for additional information.

## Equipment servicing hazards

You, your HP CEs and HP ASEs require safe access to the disk array. Along with the specifications listed in “General computer room requirements” ([page 21](#)), ensure that electrical or data communication cables do not create a safety hazard.

---

## General computer room requirements

The goal of a computer room is to maintain an ideal environment for your computer equipment, including your HP Disk Array XP1024. The following guidelines are recommended:

- Locate the computer room away from exterior walls of the building to avoid the heat gain from windows and exterior wall surfaces.
- When locating near exterior windows is unavoidable, use windows that are double or triple glazed and shaded to prevent direct sunlight from entering the computer room.
- Maintain the computer room at a positive pressure relative to the surrounding spaces to reduce introduction of contaminants.
- Use a vapor barrier installed around the entire computer room envelope to restrain moisture migration.
- Caulk and vapor-seal all pipes and cables that penetrate the envelope.
- Use a 10-inch to 12-inch raised floor system for the most favorable room air distribution system if the under floor area is being used as an as part of the air circulation system.

### Space planning

A site prep begins with your existing floor plan. The location of the new equipment should be selected and a new floor plan should be developed. You can use this section to satisfy the disk array physical requirements, ensuring that your site is ready when the disk array arrives. Your floor plan should include the location of:


- Walls
- Cable paths, including lengths
- All equipment in your computer room, including furniture, cabinets, racks, data comm equipment, and systems
- Electrical outlets
- Immovable objects
- Floor vents

## The HP Disk Array XP1024


Your HP Disk Array XP1024 is a high-performance disk array system. It is used to store large quantities of data in an efficient and secure manner. The components of the HP Disk Array XP1024 are contained in one of two types of cabinets.

Each HP Disk Array XP1024 has one disk controller cabinet (DKC), which contains the controller electronics for the disk array, and one to five disk-cabinet units (DKUs), which contain the hard disk drives.

When only XP1024 DKUs are used, the disk array can have one to four XP1024 DKUs. The figure below shows a Disk Array XP1024 with four XP1024 DKUs. When both XP1024 and XP512 DKUs are used, the DKU types cannot be mixed on the same side of the DKC.

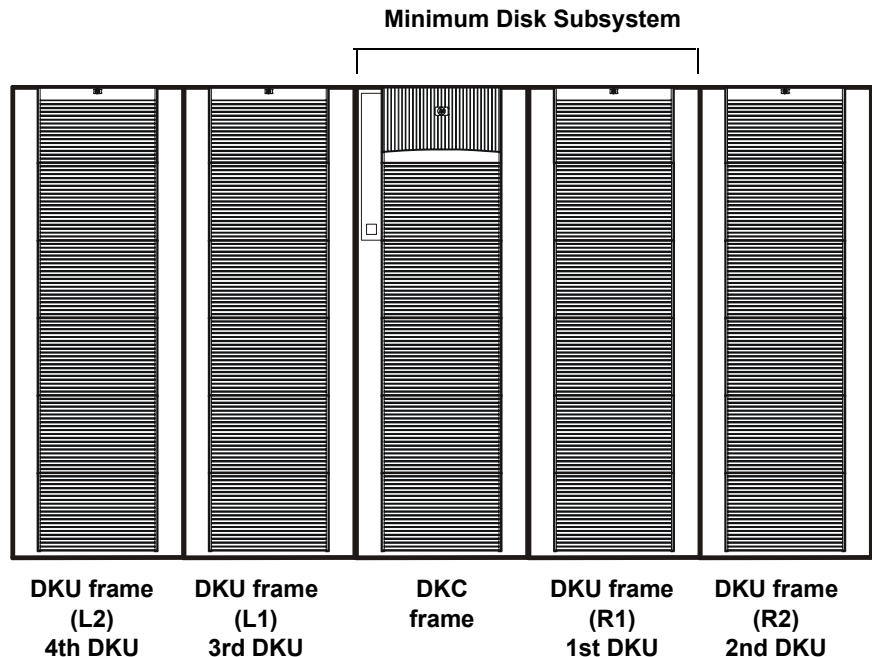

When both XP1024 and XP512 DKUs are used, the disk array can have one or two XP1024 DKUs (on one side of the DKC) and one to three XP512 DKUs (on the other side of the DKC) as shown in the figure below. XP1024 and XP512 DKUs cannot be mixed on the same side of the DKC.

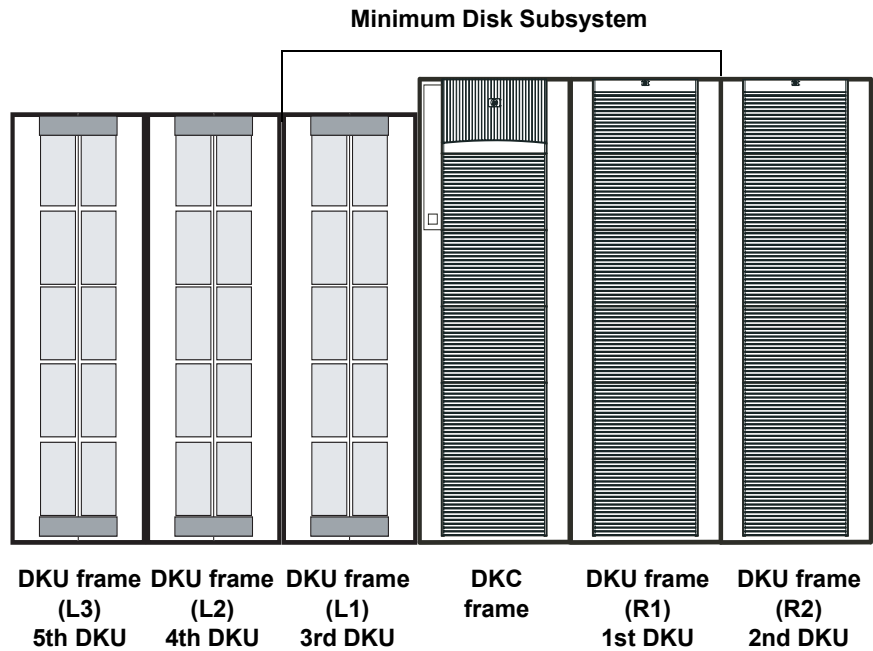

---

# Physical requirements

## Dimensions

An HP Disk Array XP1024 consists of a single DKC cabinet and one to four DKU cabinets with the approximate dimensions listed in the table below.

Minimum Dimensions	DKC mm	DKC in	DKU mm	DKU in
Height	1860	73.6	1860	73.6
Width	782*	30.8	750	29.5
Depth	800	31.5	800	31.5

\* The width of the DKC includes the side panels.

## Weight

An HP Disk Array XP1024 consists of a single DKC cabinet and one to four DKU cabinets. The table below provides the approximate weights for a minimum and maximum configuration. The main factor that increases weight is the number of hard disk drives (HDDs) in a DKU cabinet:

Weight	DKC kg	DKC lb	DKU kg	DKU lb
Minimum configuration	478	1051	492	1082
Maximum configuration	586	1290	755	1661

## Specific component dimensions and weights

The values listed in these tables are approximate and should be used for general reference only; use these values to estimate the hallway and door clearances as well as floor strength for moving the disk array cabinets.



<b>Component</b>	<b>Width</b>	<b>Depth</b>	<b>Height</b>	<b>Weight Fully Loaded</b>
DKC Cabinet alone	782 mm 30.8 in	800 mm 31.5 in	1860 mm 73.6 in.	586 kg 1290 lb
DKC Cabinet packaged*	890 mm 35 in	1000 mm 39.37 in	2020 mm 79.58 in	674 kg 1484 lb
DKU Cabinet alone	750 mm 29.5 in	800 mm 31.5 in	1860 mm 73.6 in	755 kg 1661 lb
A7925A DKU Cabinet packaged*	890 mm 35 in	1000 mm 39.37 in	2020 mm 79.58 in	823 kg 1811 lb
A7925U DKU Cabinet packaged*	890 mm 35 in	1000 mm 39.37 in	2020 mm 79.58 in	843 kg 1855 lb

\*For shipments to locations outside the United States, Canada, and Germany, add 88 kg (194 lb) for an international shipping crate.

The table below lists HP Disk Array XP1024 component product weights.

<b>Product</b>	<b>Description</b>	<b>kg</b>	<b>lb</b>
A7907A	SVP High Reliability Kit	5.5	12.1
A7909A	8-Port ExSA Channel Adapter Pair	4.2	9.2
A7909B	8-Port ExSA Channel Adapter Pair - Enhanced	4.2	9.2
A7910A	8-Port 1 Gbps FC/CA Adapter Pair	4.2	9.2
A7911A	4-Port 1-2 Gbps Autosensing FC/CA CHIP Pair	4.2	9.2
A7912A	8-Port 1-2 Gbps Autosensing FC/CA CHIP Pair	4.2	9.2
A7912B	8-Port 1-2 Gbps Enhanced FC CHIP Pair	4.2	9.2
A7913B	16-Port 1-2 Gbps Enhanced FC CHIP Pair	4.3	9.25
A7914A	8-Port 1 Gbps FICON - SW CHIP Pair	4.0	8.8
A7915A	8-Port 1 Gbps FICON - LW CHIP Pair	4.0	8.8

<b>Product</b>	<b>Description</b>	<b>kg</b>	<b>lb</b>
A7916B	8-Port 1-2 Gbps Enhanced FC - LW CHIP Pair	4.2	9.2
A7917A	Additional CHIP/ACP Power Supply	8.8	19.4
A7918A	2GB Cache Memory Module	0.2	0.4
A7919A	Cache Platform Board	5.6	12.3
A7920A	Additional Battery for Cache Memory	42.2	92.8
A7921A	512MB Shared Memory Module	0.05	0.1
A7922A	Array Control Processor (ACP) pair - High Performance	3.6	7.9
A7924A	FC Cable Set for L1 DKU	3.0	6.6
A7926A	FC Cable Set for R2 and L2 DKU	3.0	6.6
A7928A	36 GB 15k rpm FC array group - 4 disks	4.0	8.8
A7928S	36 GB 15k rpm FC spare disk drive	1.0	2.2
A7929A	73 GB 10k rpm FC array group - 4 disks	4.0	8.8
A7929S	73 GB 10k rpm FC spare disk drive	1.0	2.2
A7930A	146 GB 10k rpm FC array group - 4 disks	4.0	8.8
A7930S	146 GB 10k rpm FC spare disk drive	1.0	2.2
A7931A	73 GB 15k rpm FC array group - 4 disks	4.4	9.7
A7931S	73 GB 15k rpm FC spare disk drive	1.1	2.4
A7934A	4GB Cache Memory Module	0.2	0.4
A7935A	1GB Shared Memory Module	0.05	0.1
A7938A	8-Port Gigabit Ethernet iSCSI - SW CHIP Pair	4.6	10.1
A7939A	4-Port Gigabit Ethernet NAS - SW CHIP Pair	4.5	9.9


---

# HP Disk Array XP512 DKU physical requirements

## Dimensions

The approximate dimensions of an HP StorageWorks Disk Array XP512 DKU are listed in the table and diagrammed in the figure below.

Minimum Dimensions	DKU mm	DKU in
Height	1790	70.5
Width	600	23.6
Depth	800	31.5

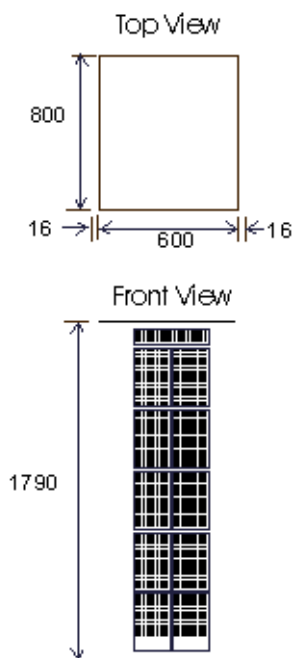

## Weight

The values listed in these tables are approximate and should be used for general reference only. Use these values to estimate the hallway and door clearances as well as floor strength for moving the subsystem frames.

The table below lists the physical dimensions for each HP StorageWorks Disk Array XP512 DKU frame component.

Component	Width	Depth	Height	Weight Fully Loaded
A5965A DKU Cabinet alone	600 mm 23.62 in	600 mm 23.62 in	1790 mm 70.53 in.	480 kg 1056 lb
DKU Cabinet packaged*	890 mm 35 in	1000 mm 39.37 in	2020 mm 79.58 in	539 kg 1185.5 lb

\*For shipments to locations outside the United States, Canada, and Germany, add 88 kg (194 lb) for an international shipping crate.

The table below lists the weights for each HP StorageWorks Disk Array XP512 DKU frame component.

Product	Description	kg	lb
All Options	Disk Array frame	300	661
A5966A	18GB array group, 4 drives per group	5.6	12.3
A5966S	18GB spare drive	1.4	3.1
A5967A	47GB array group, 4 drives per group	7.2	15.9
A5967S	47GB spare drive	1.8	4.0
A5968A	73 GB array group	7.2	15.9
A5968S	73 GB spare drive	1.8	4.0
A5969A	181 GB array group	7.2	15.9
A5969S	181 GB spare drive	1.8	4.0
A5974A	FC cable set for DKC frame to L1 (frame #4)	2	4.4
A5975A	FC cable set for frame R2, R3, L2, or L3	3	6.6

---

## Service and cable routing space requirements

This section contains information about space requirements for the HP Disk Array XP1024. This data should be used as a guideline for space planning development.

The service clearance is the additional flooring space required to access your HP Disk Array XP1024. This space should be reserved for the disk array; never use this space for storage.

HP recommends that you prepare a revised floor plan showing the overall location and arrangement of your computer room, including the addition of your disk array. Enough room and lighting should be provided for people to work effectively on a daily basis and for periodic servicing of equipment.

Select a location that can accommodate the addition of more DKU cabinets as your requirements increase. Be sure to consider interconnecting cables and power cord lengths when planning your layout. Identify the location of all power outlets on the floor plan. Plan to keep cables away from traffic areas to help prevent accidents and equipment failures. Prior to installation, consult your site specialist responsible for your computer room.

HP strongly discourages the use of carpeting, including anti-static varieties, within 6.0 m (20 ft.) of the disk array. If this advice is not followed, you should place static discharge mats where personnel must walk across before touching any part of the array. Failure to comply with this precaution can result in equipment damage through static discharge.

If you are planning to construct a new computer room or modify an existing site, first consult with your HP representatives and local contractors. It is important to plan the site with future expansion in mind so that equipment can be added without disturbing the computer operation.

The computer room floor must be able to support the total weight of the equipment as well as localized weight at each caster or foot of the equipment cabinets. A common method of preparing an adequate floor for a computer room is to construct a raised floor over the building floor. The weight should be spread evenly and the flooring should provide an area

through which interconnecting cables can be run conveniently and unobtrusively. It should allow for optimum distribution of conditioned air. Raised floor access ramps must not exceed a 10° slope.

To estimate floor strength, the following items should be considered:

- The total weight of the equipment (the unpacked and packaged weights are listed in this chapter)
- The total weight of furniture such as desks, chairs, and storage cabinets
- Total approximate weight of computer room personnel
- Weight of moving equipment such as forklifts, dollies, and so on.

Any questions regarding the adequacy of airflow construction should be referred to and evaluated by a qualified structural engineer.

**Caution**

---



*In addition to determining the adequacy of the computer site floor, ensure that all floors, stairs, and elevators which might be used when the disk array is moved to its destination can support the weight and size of the equipment. Failure to comply can result in damage to the equipment.*

---

The minimum service access is:

- Rear: 800 mm (31.5 in)
- Side: 0 mm
- Front: 800 mm (31.5 in)

Maximum point floor loading is 500 kg (1102.3 lb).

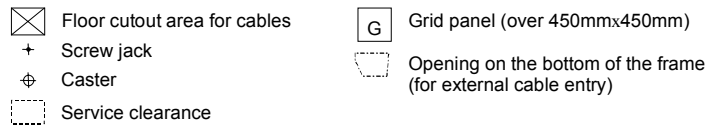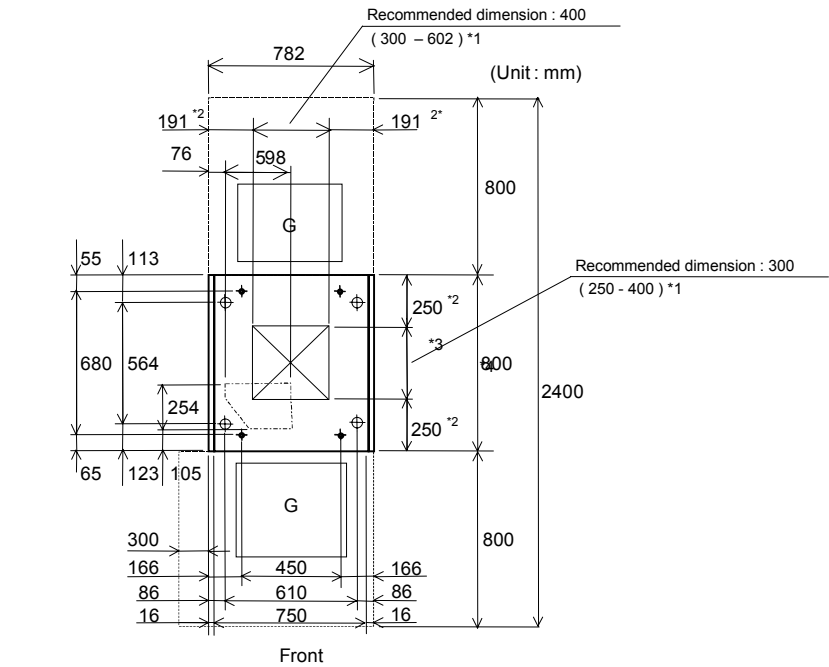

\*1 Values of parenthesis show allowable range of the floor cutout dimension.

The floor cutout should be planned in the center of the DKC. In case that the floor cutout is planned in a right position for the external cable work and it is within the allowable range, the cutout position may be off-center.

In this case, check the relation between the positions of the cutout and the opening on the bottom of the frame.


If the floor cutout width is planned more than 520 mm, be careful about the restriction of the movable direction because there is a possibility that the caster wheels fall down into the cutout.

\*2 These dimensions vary with the floor cutout dimension.

\*3 The thickness of the front door (35 mm) is different from the rear door (25 mm).


\*4 The overhang of the front door panel insert (7 mm) is not included.

The figure below shows the recommended service clearance and floor cutout recommendations for the XP1024 DKU.

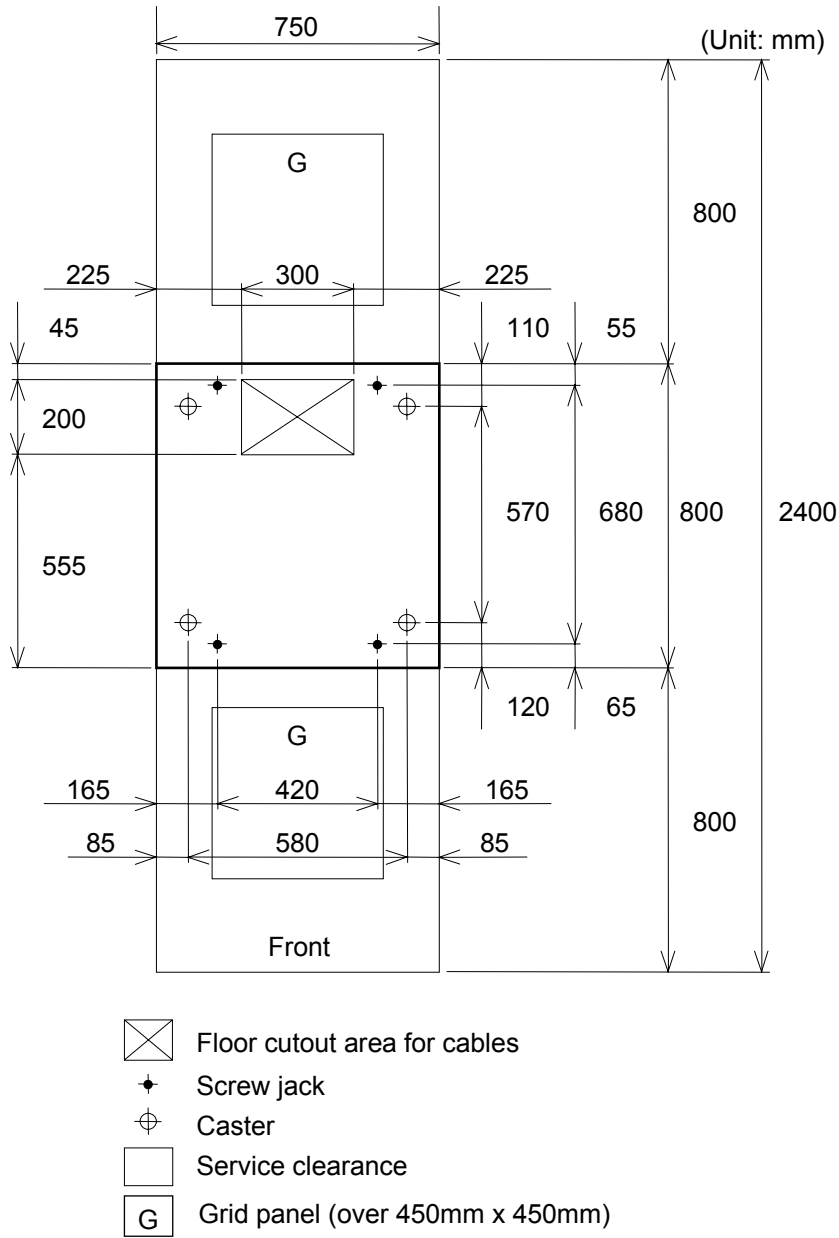



The figure below shows the minimum service access and cutouts for the XP1024.

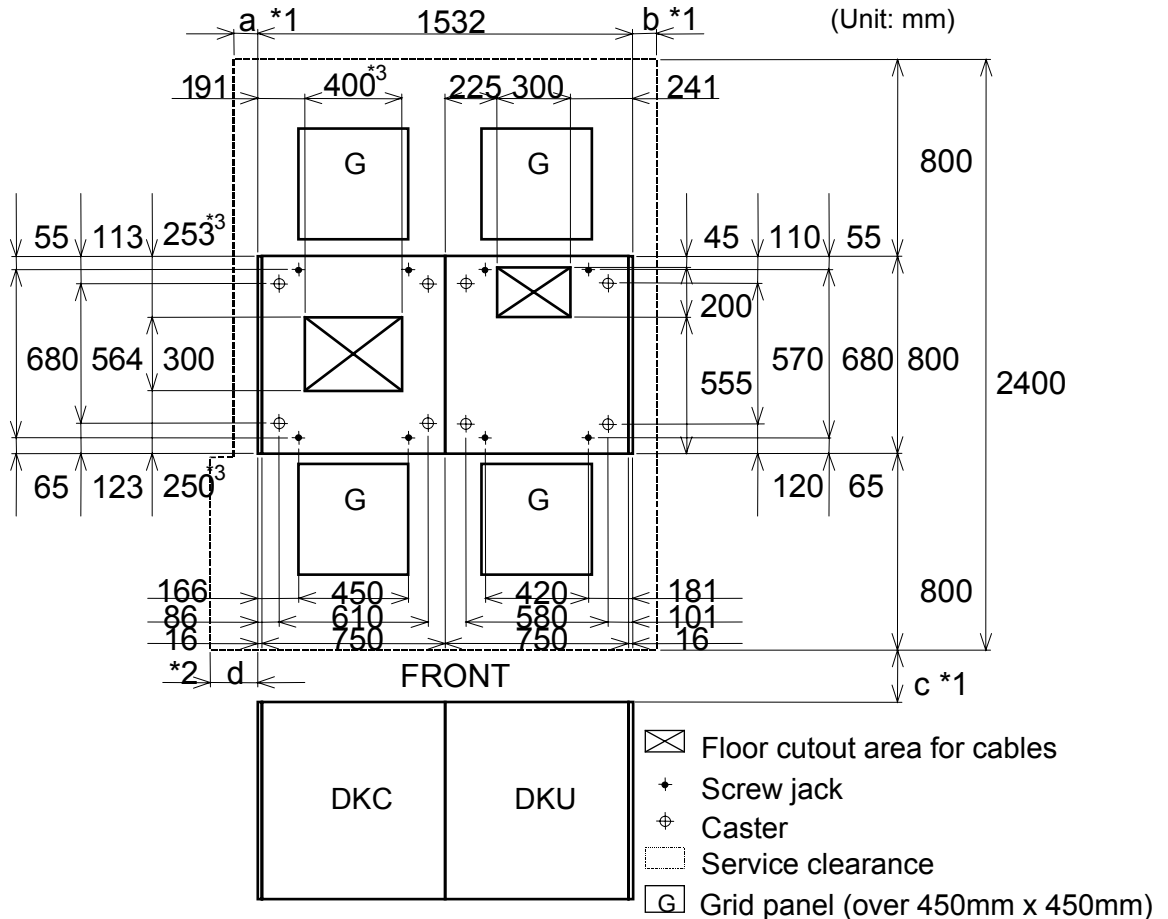

1. Clearance (a+b) depends on the floor load rating and clearance (c). Floor load rating and clearances are listed in the table on [\(page 34\)](#).
2. Front clearance (d) of 0.3 m is required for unobstructed opening of the front door.

The table below shows the floor load rating for service clearances (minimum configuration).


Floor load rating (kg/sq. m)	Required clearance (a+b) m				
	Clearance (c) m				
	C = 0	C = 0.2	C = 0.4	C = 0.6	C = 1.0
500	0.6	0.4	0.2	0	0
450	0.9	0.7	0.4	0.3	0
400	1.4	1.0	0.8	0.6	0.3
350	2.0	1.6	1.3	1.0	0.7
300	3.0	2.5	2.1	1.8	1.3

Actual clearances for installation should be decided after consulting with construction specialist responsible for installation building, as they could vary depending on the size/layout of the system and building conditions.

When various configurations of subsystems are arranged in a row, clearance values based on the largest subsystem should be used.

From the viewpoint of maintenance operations, it is suggested that clearance (c) be made as large possible.

The figure below shows the maximum service access and cutouts for the XP1024.

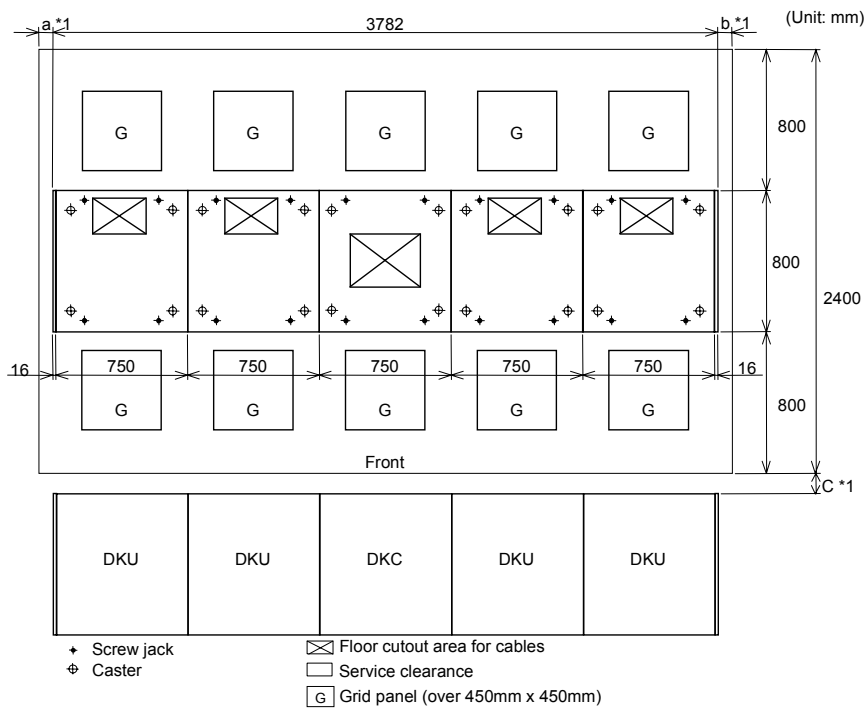

Clearance (a+b) depends on the floor load rating and clearance (c). The following table lists floor load ratings.

Floor Load Rating (kg/m <sup>2</sup> )	Clearance (C) (m)				
	C = 0	C = 0.2	C = 0.4	C = 0.6	C = 1.0
500	1.9	1.2	0.8	0.3	0
450	2.7	2.0	1.4	1.0	0.7
400	3.9	3.1	2.4	1.8	1.0
350	5.6	4.6	3.7	3.1	2.0
300	8.3	6.9	3.9	5.0	3.7

If your installation will include one or more XP512 DKUs, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for XP512 clearance requirements.

---

## Data comm requirements

Route data comm cables away from areas of high static electric fields created by power transformers and heavy foot traffic. Use shielded data comm cables that meet approved industrial standards to reduce the effects of external fields.

## Phone Home with Continuous Track

The HP Disk Array XP1024 Phone Home capabilities detect and report problems even before they are noticed by operators and users. Continuous Track, a program that resides in the DKC, phones “home” to the HP Storage Technology Center (STC) and provides:

- **Periodic “well” checkups**

Every 24 hours, Continuous Track calls the HP Storage Technology Center. When a successful connection is made, status and/or configuration information is transferred from the DKC to the HP Storage Technology Center. Your HP CE sets the time of the call. This checkup records the health of your disk array on a daily basis.

- **Incidental “sick” calls**

When an error occurs, a service information message (SIM) is generated. The SIM is stored in the DKC for use by your HP service representative. The Continuous Track remote maintenance tool also reports the SIMs to the STC. SIMs are classified according to severity, and many SIMs do not require immediate attention. These SIMs are often addressed during routine maintenance, and are corrected before a failure occurs. Serious-level and acute-level SIMs are reported to the STC immediately to ensure that the problem is addressed as soon as possible.

To activate Phone Home, these requirements are necessary:

- Dedicated analog phone line
- An HP CE to configure Continuous Track

## HP StorageWorks Command View XP and your public Intranet

HP StorageWorks Command View XP is a web-based software application that permits you to connect to, monitor, and manage disk arrays. You can remotely manage your HP Disk Array XP1024.

### Local Area Network (LAN)

To connect to your Intranet (public LAN), your CE directly connects your HP Disk Array XP1024 to an available Ethernet port on your public LAN. To ensure network security, consult with your HP CE and your network administrator before selecting the location of your LAN drop.

Network Hardware Needed:

- One twisted pair (Cat 5) cable
- Ane available LAN drop on your Intranet


### Outside phone line

*Recommendation* Install a public voice phone line near your disk array. This phone line is used by you and your HP CE for voice communication in and outside of your facility.

---

## Electrical requirements

Power requirements are one of the most important considerations prior to installing your disk array. For disk array cabinets with two connections to AC power, if one input fails, the second input must be capable of supporting the entire current demand nominally shared by the two power connections. For disk array cabinets with four connections to AC power, the two connections to AC Box 1 or the two power connections to AC Box 2 must be capable of supporting the entire current demand nominally shared by the four power connections. The figure below shows two examples of the disk array's fault-tolerant operation.

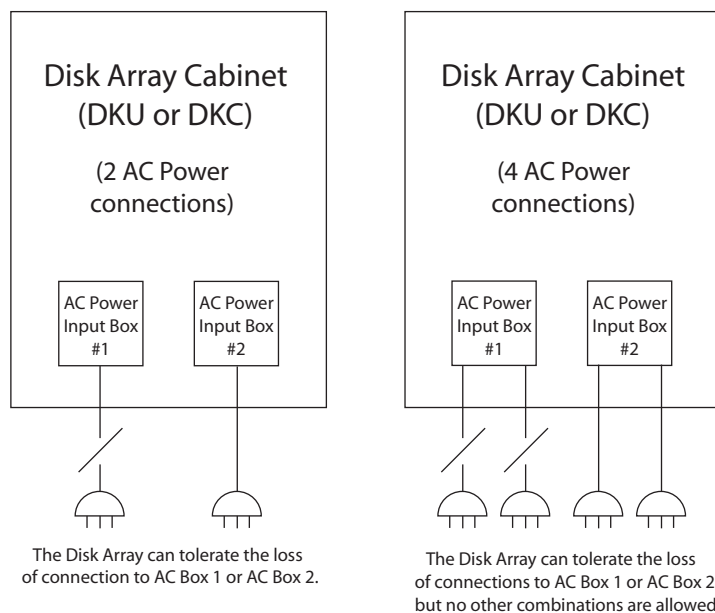

## Line voltage

The line voltage (AC) at the wall power outlet is a function of the local power utility and your building power distribution network. Voltages outside the operating range of the disk array can cause intermittent system errors or a complete system shutdown. If required, the HP CE, along with

your electrician can determine the current line voltage and make recommendations. Avoid the use of a line voltage conditioner.

Make sure that a power distribution unit (if used) supports the correct voltage to support your entire system.

## Branch Circuit Breakers

See “Branch Circuit Requirements” ([page 39](#)) for the specific branch circuit requirements for your power situation.

### Three-phase branch circuit breakers

The power cords supplied with each HP Disk Array XP1024 DKU configured for three-phase power are sized for connection to a 30 or 60-amp circuit. There are no external power cords for the DKC when the HP Disk Array XP1024 is configured for 60-amp, three-phase power.

### Single-phase branch circuit breakers

The power cords supplied with each HP Disk Array XP1024 DKU configured for single-phase power are sized for connection to a 30 or 50-amp circuit. The power cords supplied with each HP Disk Array XP1024 DKC configured for single-phase power are sized for connection to a 30 or 40-amp circuit.

30-amp, single-phase power is available by special order only.

## Frequency

AC line frequency is normally determined by your local power providers. In some cases, electrical power is supplied by motor-generators. Shifts in AC line frequency can cause system errors. Your HP CE can monitor the frequency of the input AC line power and make recommendations, if necessary. The HP Disk Array XP1024 requires that the line frequency be within 0.5 Hz of the rated line frequency (50 Hz or 60 Hz).

The following tables reflect the line voltage for each power cable when the cabinets are cabled with functioning, redundant power cables.

## AC line voltage requirements for the HP Disk Array XP1024 DKC

The table below lists the basic AC power requirements for a 40-amp, single-phase XP1024 DKC.

Parameter	Nominal Rated Voltage (Vac)				
	200	208*	220	230	240
Minimum operating voltage (Vac)	184	191	202	212	221
Maximum operating voltage (Vac)	212	220	233	244	254
Rated line current per power cord (Arms)	8.0	7.7	7.2	7.0	6.6
Number of power cords	2	2	2	2	2
Recommended circuit breakers	40 A	40 A	40 A	40 A	40 A
Number of circuit breakers	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30

\* 60 Hz only.



The table below lists the basic AC power requirements for a 30-amp, single-phase, XP1024 DKC.

<b>Parameter</b>	<b>Nominal Rated Voltage (Vac)</b>				
	<b>200</b>	<b>208*</b>	<b>220</b>	<b>230</b>	<b>240</b>
Minimum operating voltage (Vac)	184	191	202	212	221
Maximum operating voltage (Vac)	212	220	233	244	254
Rated line current per power cord (Arms)	4.0	3.9	3.6	3.5	3.3
Number of power cords	4	4	4	4	4
Recommended circuit breakers	30 A	30 A	30 A	30 A	30 A
Number of circuit breakers	4	4	4	4	4
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30

\* 60 Hz only.

The table below lists the basic AC power requirements for a 30-amp, three-phase XP1024 DKC.

<b>Parameter</b>	<b>Nominal Rated Voltage (Vac)</b>							
	<b>200</b>	<b>208*</b>	<b>220</b>	<b>230</b>	<b>240</b>	<b>380</b>	<b>400</b>	<b>415</b>
Minimum operating voltage (Vac)	184	191	202	212	221	350	368	382
Maximum operating voltage (Vac)	212	220	233	244	254	403	424	440
Rated line current per power cord (Arms)	5.2	5.0	4.7	4.6	4.3	2.7	2.6	2.5
Number of power cords	2	2	2	2	2	2	2	2
Recommended circuit breakers	30 A	30 A	30 A	30 A	30 A	30 A	30 A	30 A
Number of circuit breakers	2	2	2	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30	30	30	30

\* 60 Hz only.

## AC line voltage requirements for the HP Disk Array XP1024 DKU

The table below lists the basic AC power requirements for a 50-amp, single-phase, XP1024 DKU.

Parameter	Nominal Rated Voltage (Vac)				
	200	208*	220	230	240
Nominal rated voltage (Vac)	200	208	220	230	240
Minimum operating voltage (Vac)	184	191	202	212	221
Maximum operating voltage (Vac)	212	220	233	244	254
Rated line current per power cord (Arms)	22.3	21.6	20.3	19.4	18.6
Number of power cords	2	2	2	2	2
Recommended circuit breakers	50 A	50 A	50 A	50 A	50 A
Number of circuit breakers	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30

\* 60 Hz only.

The table below lists the basic AC power requirements for a 30-amp, single-phase XP1024 DKU.

<b>Parameter</b>	<b>Nominal Rated Voltage (Vac)</b>				
	<b>200</b>	<b>208*</b>	<b>220</b>	<b>230</b>	<b>240</b>
Minimum operating voltage (Vac)	184	191	202	212	221
Maximum operating voltage (Vac)	212	220	233	244	254
Rated line current per power cord (Arms)	13.5	13.0	12.3	11.7	11.2
Number of power cords	4	4	4	4	4
Recommended circuit breakers	30 A	30 A	30 A	30 A	30 A
Number of circuit breakers	4	4	4	4	4
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30

\* 60 Hz only.

The table below lists the basic AC power requirements for a 60-amp, three-phase XP1024 R1 DKU.

Parameter	Nominal Rated Voltage (Vac)							
	200	208 <sup>1</sup>	220	230	240	380	400	415
Minimum operating voltage (Vac)	184	191	202	212	221	350	368	382
Maximum operating voltage (Vac)	212	220	233	244	254	403	424	440
Rated line current per power cord (Arms)	19.0	18.2	17.2	16.6	15.7	10.7	10.2	9.8
Number of power cords	2	2	2	2	2	2	2	2
Recommended circuit breakers	60 A	60 A	60 A	60 A	60 A	30 A min. <sup>2</sup>	30 A min. <sup>2</sup>	30 A min. <sup>2</sup>
Number of circuit breakers	2	2	2	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30	30	30	30

1. 60 Hz only.
2. 30-amp breakers are adequate at 380, 400, and 415 Vac, because the current drawn at these voltages is considerably less than at the lower voltages.

The table below lists the basic AC power requirements for 60-amp, three-phase, R2, L1, and L2 XP1024 DKUs. Unlike the first DKU (R1), DKUs R2, L1, and L2 do not provide AC power to the DKC.

<b>Parameter</b>	<b>Nominal Rated Voltage (Vac)</b>							
	<b>200</b>	<b>208<sup>1</sup></b>	<b>220</b>	<b>230</b>	<b>240</b>	<b>380</b>	<b>400</b>	<b>415</b>
Minimum operating voltage (Vac)	184	191	202	212	221	350	368	382
Maximum operating voltage (Vac)	212	220	233	244	254	403	424	440
Rated line current per power cord (Arms)	19.0	18.2	17.2	16.6	15.7	10.7	10.2	9.8
Number of power cords	2	2	2	2	2	2	2	2
Recommended circuit breakers	60 A	60 A	60 A	60 A	60 A	30 A min. <sup>2</sup>	30 A min. <sup>2</sup>	30 A min. <sup>2</sup>
Number of circuit breakers	2	2	2	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30	30	30	30

1. 60 Hz only.
2. 30-amp breakers are adequate at 380, 400, and 415 Vac, because the current drawn at these voltages is considerably less than at the lower voltages.

The table below lists the basic AC power requirements for a 30-amp, three-phase XP1024 DKU.

Parameter	Nominal Rated Voltage (Vac)							
	200	208*	220	230	240	380	400	415
Minimum operating voltage (Vac)	184	191	202	212	221	350	368	382
Maximum operating voltage (Vac)	212	220	233	244	254	403	424	440
Rated line current per power cord (Arms)	15.0	14.4	13.6	13.0	12.5	8.8	8.4	8.1
Number of power cords	2	2	2	2	2	2	2	2
Recommended circuit breakers	30 A	30 A	30 A	30 A	30 A	30 A	30 A	30 A
Number of circuit breakers	2	2	2	2	2	2	2	2
Dropout carry-through time at minimum line voltage (ms)	30	30	30	30	30	30	30	30

\* 60 Hz only.

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for power-requirements information for these DKUs.

## Safety and dedicated ground

The primary reason for grounding electrical systems is safety. The safety ground is required by the National Electric Code (USA) and most other local, regional, and national codes. In addition to safety ground, HP requires that a dedicated (earth reference) ground be installed as a common reference point for all system components. You should consult with your HP CE and your electrician to ensure that your electrical system meets all local and national safety codes.

## Grounding requirements

Your subsystem must meet all of the following conditions:


- An insulated grounding conductor that is identical in size and insulation material and thickness to the ungrounded branch-circuit supply conductors. It should be green, with or without yellow stripes, and is to be installed as a part of the branch circuit that supplies the unit or system. This means the ground conductor must be run in the same conduit, armored cable, or other cable bundle as the phase wires.
- Grounding as prescribed by your local country codes.
- The grounding conductor mentioned above should be grounded to earth at the service equipment or other acceptable building earth ground such as the building frames (in the case of a high rise steel frame structure).
- IT configured grounding systems are not certified for use with the XP1024 as these grounding systems may not have solidly conductor-connected grounded power systems and/or they may have resistive impedance inserted in ground and/or neutral lines. The XP1024 requires a solidly conductor-connected ground and may require a separate neutral in the case of WYE or STAR connections.



## Receptacles

When receptacles are used to connect your disk array components to AC power, they must include a dedicated ground connection that is insulated from the receptacle. It is important that the receptacle box be grounded with an additional ground connection that is separate from the dedicated ground. The additional ground can be hard conduit.

Each disk array cabinet has two or four separate connections to AC power (except the 60-amp, three-phase DKC, which has no external power connection). For disk array cabinets with two connections to AC power, each input must be capable of supporting the entire current demand for the cabinet. For disk array cabinets with four connections to AC power, the two inputs to AC Box 1 or the two inputs to AC Box 2 must be capable of supporting the entire current demand for the cabinet. The figure below shows two examples of the disk array's fault-tolerant operation.

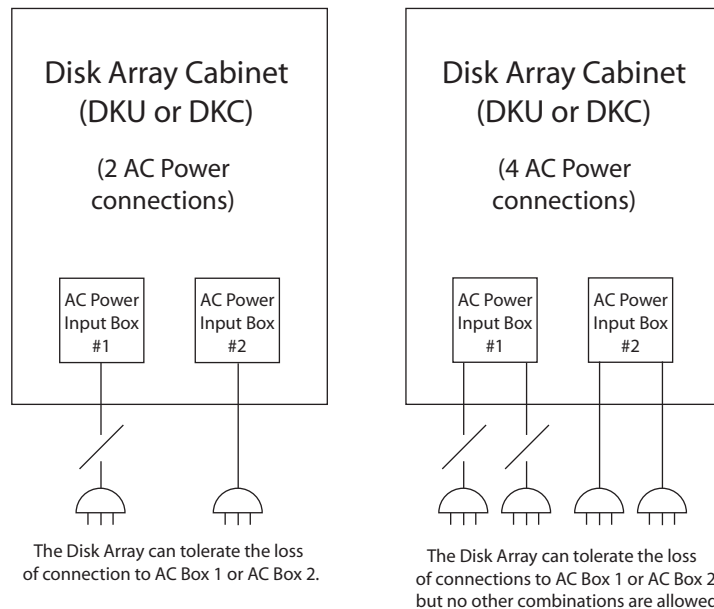

Specific power plugs and receptacles are required for the XP1024 DKC and DKUs, depending on the power option you specify when ordering the HP Disk Array XP1024. The power cords on 60 Hz cabinets are shipped with plugs attached and connected. The power cords on 50 Hz cabinets are shipped without plugs. Customers are responsible for having the correct plugs and receptacles installed by an electrician in compliance with local electrical requirements and practices.

**Caution**

---

*When installing the receptacles, the electrician must ensure that each receptacle has its own neutral (if required) and ground. Using the same neutral/ground for more than one circuit causes voltage loss and heat problems. It can create a fire hazard. A shared neutral conductor that fails open-circuit can cause overvoltage damage to equipment.*

---

The table below lists the plug and connector part numbers for 60 Hz configurations of the HP Disk Array XP1024.

Power Source	Frequency	Breaker Rating	Plug	Connector
Single-phase	60 Hz	30 A	Russellstoll 3750DP	Russellstoll 3933 (Alt. 9C33U0) or 3753 (Alt. 9R33U0W)
		40/50 A	Russellstoll 9P53U2	Russellstoll 9C53U2 or 9R53U2W
Three-phase	60 Hz	30 A	Russellstoll 3760PDG	Russellstoll 3934 (Alt. 9C34U0) or 3754 (Alt. 9R34U0W)
		60 A	Russellstoll RS460P9W	Russellstoll RS460C9W or RS460R9W

The Russelstoll connectors are available through most industrial electrical distributors. HP has arranged for these connectors to also be available in stock from the distributors listed below. These distributors are able to ship worldwide and ship via customer preference.

Beck Electrical Supply  
2775 Goodrick Avenue  
Richmond, CA 94801 USA  
Telephone: (800) 466-4395  
Fax: (800) 466-5442  
Contact: Ken Mogan  
[casales@beckelectric.com](mailto:casales@beckelectric.com)

Source Research, Inc. (SRI)  
2160 Sunnydale Boulevard  
Clearwater, FL 33765-2108 USA  
Telephone: (800) 356-0259  
Contact: Erik Peterson, telephone extension 302  
<http://www.sourceresearch.com/index.cfm>

## **Power line transients**

Heavy electrical loads from nearby machinery or equipment (elevators, electric welders, etc.) can cause intermittent system problems with sophisticated electronic equipment, even if that equipment is on a separate circuit breaker. When faced with these conditions, you should provide a separate, completely independent power panel with an isolated ground and circuit breaker coming directly from the main building power source or secondary power source.

If necessary, your HP CE can measure your power line noise level and make appropriate recommendations concerning the use of line treatment devices.

## Maximum peak inrush and crest factor

The table below shows the maximum peak inrush currents for the HP Disk Array XP1024 DKC and DKUs.

Cabinet	Power	Single-Phase	Three-Phase
DKC	30-amp	25 A	30 A
	40-amp	67 A	N/A <sup>1</sup>
DKU	30-amp	33 A	79 A
	50-amp	53 A	N/A <sup>2</sup>
	60-amp	N/A <sup>3</sup>	99 A <sup>4</sup>
			40 A <sup>5</sup>

1. The 40-amp power configuration is single-phase only.
2. The 50-amp power configuration is single-phase only.
3. The 60-amp power configuration is three-phase only.
4. First DKU (R1) only. This value includes the current drawn by the DKC in this configuration.
5. R2, L1, and L2 DKUs.

The table below shows the crest factors for the HP Disk Array XP1024.

Cabinet	Single-Phase	Three-Phase
DKC	2.02	1.88
DKU	1.65	1.54

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for peak-inrush and crest-factor information for these DKUs.

---

## Sources of electrical interference

Ensure that the disk array is protected from sources of electrical interference:

wall outlets	Convenience power outlets for building maintenance equipment (vacuum cleaners, floor buffers, etc.) must be wired from circuit breakers on a power panel separate from the computer system panel. The ground wires from these outlets must be connected to the normal building distribution panel and not to the system ground.
	If a separate power source and separate ground are not provided, operation of janitorial equipment can induce electrical noise and cause abnormal operation of the computer system. Your electrician can verify whether or not maintenance outlets are on separate panels.
lightning	In some geographical areas it may be advisable to install lightning protection for both personnel and computer systems.
	The principles of lightning protection and personnel safety are outlined in detail in the lightning protection code contained in the National Fire Protection Association (NFPA) Handbook.
vibration	Continuous vibration can cause a slow degradation of mechanical parts and, when severe, can cause data errors in disk drives. Mechanical connections such as printed circuit assembly (PCA) conductors, cable connectors, and processor backplane wiring can also be affected by vibrations.

electromagnetic interference	The disk array is specifically designed to reduce its susceptibility to radiated and conducted interference. Electromagnetic interference can cause a variety of system problems. Your HP CE can advise you about many of the most common causes of electromagnetic interference.
metal	If metal is used in the construction of the raised floor, ensure that there is a common ground connection between the raised floor and main floor to avoid possible build up of different voltage potentials. Failure to comply can result in serious injury to personnel and damage to equipment.
flammable materials	Fundamental safeguards for disk arrays should include a site well away from any sources of potential damage. The system should not be installed or operated in an environment where there is a risk of fire or explosion due to the presence of highly flammable gases, volatile liquids, or combustible dust.
airborne contaminants	<p>Airborne contaminants and particles of a certain size and hardness can damage your disk arrays. Some of the most common contaminants are dust, smoke, ash, eraser debris, food crumbs, and salty air.</p> <p>Your HP CE can assist you in determining whether or not you need be concerned about airborne contaminants.</p> <p>Also, see Dust and Pollution Control (<a href="#">page 70</a>) and Metallic Particulate Contamination (<a href="#">page 70</a>).</p>

---

## Three-phase AC cabling for the USA (60 Hz)

Each three-phase HP Disk Array XP1024 DKU has two main disconnect devices (two main breakers for dual power lines) so that AC power to the unit can be supplied from separate power distribution panels with two power-supply cords.

---

**Caution** *Trained service personnel should be present whenever the disk array is being connected to a new power source for the first time.*

---


If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for cabling information for these DKUs.

### Connecting the external power supply cords

The HP Disk Array XP1024 can be factory-configured for 60-amp or 30-amp, three-phase power.

#### 60-amp, three-phase power

When the disk array uses 60-amp, three-phase input power, HP Disk Array XP1024 DKUs have two power cords, but the DKC has no external power cords as shown in the figure below.

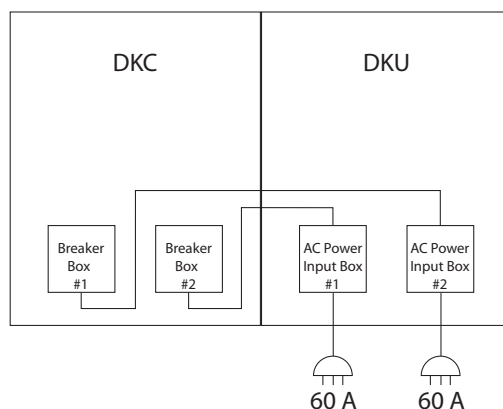


In this configuration, an internal cable from the first (R1) DKU provides power to the DKC. If one power source malfunctions, the other power source assumes the total load, providing uninterrupted operation. HP recommends that each power cord have a separate electrical circuit as its source in case of a circuit failure. Each power-supply cord is supplied with an attachment plug type Russellstoll RS460P9W. Be sure to install Russellstoll RS460C9W or RS460R9W socket receptacles between the power distribution panel of the building and the attachment plugs for the unit.

The power cords provided with your disk array are non-shielded, type ST or equivalent with four #4 AWG (minimum) conductors terminated at one end with an assembled plug connector.

### 30-amp, three-phase power

When the disk array uses 30-amp, three-phase input power, HP Disk Array XP1024 DKCs and DKUs have two power cords each as shown in the figure below.

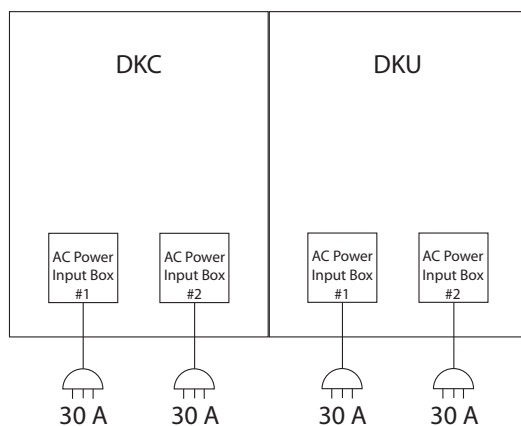

If one power source malfunctions, the other power source assumes the total load, providing uninterrupted operation. HP recommends that each power cord have a separate electrical circuit as its source, in case of a circuit failure. Each power-supply cord is supplied with an attachment plug type Russellstoll 3760PDG. Be sure to install Russellstoll 3934 (alternate,



9C34U0) or 3754 (alternate, 39R34U0W) socket receptacles between the power distribution panel of the building and the power plugs for the units.

The power cords provided with your disk array are non-shielded, type ST or equivalent with four #8 AWG (minimum) conductors terminated at one end with an assembled plug connector.

## Branch circuit requirements

To protect your disk array, your building must be wired correctly. Each supply (“hot”) conductor must be protected by a short-circuit protective device and by an overcurrent protective device. The following tables list the current specifications for the overcurrent protective devices required for three-phase operation:

- 30-Amp, 50 or 60 Hz, three-phase DKC ([page 42](#))
- 60-Amp, 50 or 60 Hz, three-phase R1 DKU ([page 45](#))

All protective devices must comply with national standards of the country where the units are to be installed. If a protective device interrupts any supply conductor, it must also interrupt all other supply conductors.

Overcurrent protection is not required for the neutral conductor of this unit.

Only 50 Hz, three-phase configurations have a neutral conductor.

---

## Three-phase AC cabling for Europe (50 Hz)

Each three-phase HP Disk Array XP1024 DKU has two main disconnect devices (two main breakers for dual power lines) so that AC power to the unit can be supplied from separate power distribution panels with two power-supply cords.

---

**Caution** *Trained service personnel should be present whenever the disk array is being connected to a new power source for the first time.*

---

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for cabling information for these DKUs.

### Connecting the power supply cords

All 50 Hz, European HP Disk Array XP1024 cabinets are shipped with unterminated power cords. Your electrician must select and install the correct power plug. Be sure to prepare the following socket receptacles and power cords between the power distribution board of the building and the attachment plugs for the unit:


#### 60-amp power cords

Power cords of type H07RN-F or equivalent, with five 10 mm<sup>2</sup> conductors per cord, are provided with the unit.

---

**Caution** *Be sure to connect the power cords to the distribution panel as shown below. Improper wiring of the neutral conductor may cause damage to your disk array. To reduce the risk of a wrong connection, you should use a plug and socket that is approved for this disk array. It is your electrician's responsibility to select and install the proper plug.*

---

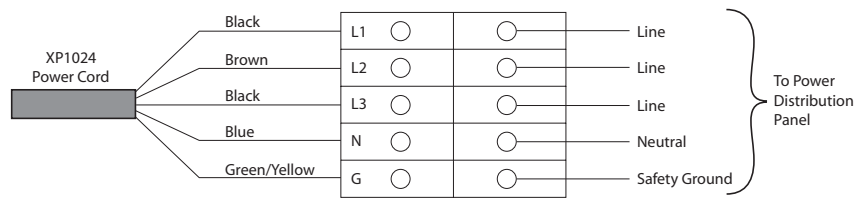

## 30-amp power cords

Power cords of type H07RN-F or equivalent, with five 6 mm<sup>2</sup> conductors per cord, are provided with the unit.

**Caution** *Be sure to connect the power cords to the distribution panel as shown in the figure above. Improper wiring of the neutral conductor may cause damage to your disk array. To reduce the risk of a wrong connection, you should use a plug and socket that is approved for this disk array. It is your electrician's responsibility to select and install the proper plug.*

When connecting to 380 to 415-volt service, a WYE configuration with neutral and ground conductors (in addition to the three-phase wires — a total of five wires) is required.

High leakage current can occur between the power supply and the unit. To avoid electrical shock, ensure that the protective earth connection is made before the supply connections.

## Branch circuit requirements

When the supplied line to line voltage is in the 380 to 415-volt range, the connection must be a five-wire WYE or STAR connection.

To protect your disk array, your building must be wired correctly. Each supply ("hot") conductor should be protected by a short-circuit protective device and by an overcurrent protective device. The following tables list

the current specifications for the overcurrent protective devices required for three-phase operation:

- 30-Amp, 50 or 60 Hz, three-phase DKC ([page 42](#))
- 60-Amp, 50 or 60 Hz, three-phase R1 DKU ([page 45](#))

The protective device must comply with national standards of the country where the units are to be installed. If a protective device interrupts a supply conductor, it must also interrupt all other supply conductors.

Overcurrent protection is not required for the neutral conductor.

---

## Single-phase AC cabling for USA

When configured for 40/50-amp, single-phase power, each HP Disk Array XP1024 cabinet (both the 50-amp DKC and the 40-amp DKUs) has two power cords and two main disconnect devices so that AC power can be supplied from separate power distribution panels. When configured for 30-amp, single-phase power, each HP Disk Array XP1024 cabinet has four power cords and four main disconnect devices.

---

**Caution** *Trained service personnel should be present whenever the disk array is being connected to a new power source for the first time.*

---


If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for cabling information for these DKUs.

### Connecting the power-supply cords

The HP Disk Array XP1024 can be factory-configured for 40/50-amp or 30-amp, single-phase power.

## 40/50-amp, single-phase power

Each 40/50-amp HP Disk Array XP1024 cabinet has two power-supply cords with attachment plug type Russellstoll 9P53U2 as shown below.

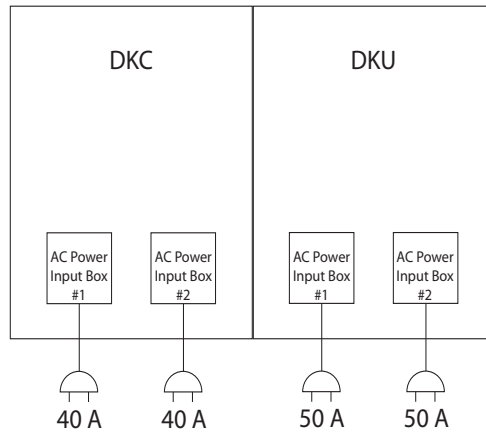


Be sure to install Russellstoll 9C53U2 or Russellstoll 9R53U2W socket receptacles between the power distribution panel of the building and the attachment plugs for the unit.

The power cords provided with your disk array are non-shielded, type ST or equivalent with three #6 AWG (minimum) conductors terminated at one end with an assembled 9C53U2 plug connector.

## 30-amp, single-phase power

Each 30-amp HP Disk Array XP1024 cabinet has four power-supply cords with attachment plug type Russellstoll 3750DP as shown below.

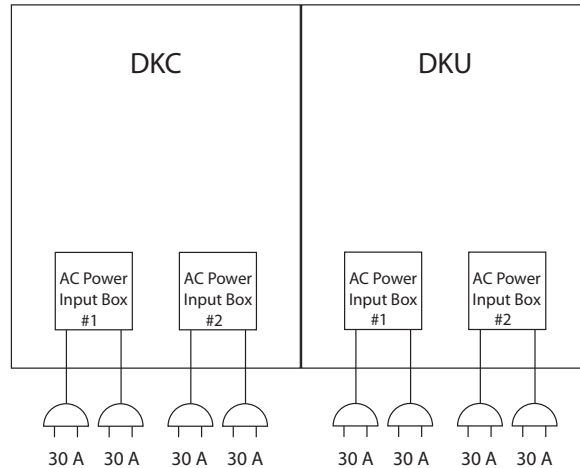

Be sure to install Russellstoll 3933 (alternate, 9C33U0) or 3753 (alternate, 39R33U0W) socket receptacles between the power distribution panel of the building and the attachment plugs for each unit.

The power cords that are provided with your disk array are nonshielded, type SJT or equivalent with three #10 AWG (minimum) conductors that are terminated at one end with an assembled plug connector.

## Branch circuit requirements

To protect your disk array, your building must be wired correctly. Each supply (“hot”) conductor must be protected by a short-circuit protective device and by an overcurrent protective device. The following tables list the current specifications for the overcurrent protective devices required for single-phase operation:

- 40-Amp, 50 or 60 Hz, single-phase DKC ([page 40](#))
- 30-Amp, 50 or 60 Hz, single-phase DKC ([page 41](#))
- 50-Amp, 50 or 60 Hz, single-phase DKU ([page 43](#))
- 30-Amp, 50 or 60 Hz, single-phase DKU ([page 44](#))

The protective device must comply with national standards of the country where the units is to be installed (USA). If a protective device interrupts a supply conductor, it must also interrupt all other supply conductors.

---

**Note** In many cases, local codes do not allow a branch circuit fitted with a 50-amp receptacle or connector to be protected by an overcurrent-protection device with a rating lower than 50 amps. You can order your HP Disk Array XP1024 with the 30-amp power option to comply with these local codes. Your electrician knows the appropriate code requirements for your location/site.

---



---

## Single-phase cabling for europe

When configured for 40/50-amp, single-phase power, each HP Disk Array XP1024 cabinet (both the 40-amp DKC and the 50-amp DKUs) has two power cords and two main disconnect devices so that AC power can be supplied from separate power distribution panels. When configured for 30-amp, single-phase power, each HP Disk Array XP1024 cabinet has four power cords and four main disconnect devices.

---

**Caution** *Trained service personnel should be present whenever the disk array is being connected to a new power source for the first time.*

---

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for cabling information for these DKUs.

## Connecting the power supply cords


### 50-amp power cords

Each 50-amp HP Disk Array XP1024 cabinet has two power-supply cords. The power cords included with the unit are type H07RN-F or equivalent with three 10 mm<sup>2</sup> conductors.

---

**Caution** *Be sure to connect the power cords to the distribution panel as shown below. Improper wiring of the neutral conductor may cause damage to your disk array. To reduce the risk of a wrong connection, you should use a plug and socket that is approved for this disk array. It is your electrician's responsibility to select and install the proper plug.*

 ---



## 30-amp power cords

Each 30-amp HP Disk Array XP1024 cabinet has four power-supply cords. The power cords included with the unit are type H07RN-F or equivalent with three 6 mm<sup>2</sup> conductors.

High leakage current may occur between the power supply and the unit. To avoid an electrical shock, be sure the protective earth connection is made before the supply connections.

## Branch circuit requirements

To protect your disk array, your building must be wired correctly. Each supply (“hot”) conductor must be protected by a short-circuit protective device and by an overcurrent protective device. The following tables list the current specifications for the overcurrent protective devices required for single-phase operation:

- 40-Amp, 50 or 60 Hz, single-phase DKC ([page 40](#))
- 30-Amp, 50 or 60 Hz, single-phase DKC ([page 41](#))
- 50-Amp, 50 or 60 Hz, single-phase DKU ([page 43](#))
- 30-Amp, 50 or 60 Hz, single-phase DKU ([page 44](#))

The protective device must comply with national standards of the country where the units is to be installed. If a protective device interrupts a supply conductor, it must also interrupt all other supply conductors.

---

**Note** In many cases, local codes do not allow a branch circuit fitted with a 50-amp receptacle or connector to be protected by an overcurrent-protection device with a rating lower than 50 amps. You can order your HP Disk Array XP1024 with the 30-amp power option to comply with these local codes. Your electrician knows the appropriate code requirements for your location/site.

---

---

# Uninterruptible Power Supply (UPS)

**Caution** *This uninterruptible power system (UPS) reference is for a product UPS situation. If you are planning or already have a site wide UPS, Hewlett-Packard recommends against a product UPS powered by a site-wide UPS for the XP1024*

---

Most HP Disk Array XP1024 units are installed in data centers where a UPS strategy is already in place. However, if you are making your first large disk array purchase, you may need a separate UPS solution. HP references the Silcon DP300 series UPS solution, a product of American Power Conversion Corp (APC), manufacturers of uninterruptible power systems.

## UPS features

The APC UPS, Silcon DP300 series, provides the following feature set:

- Protection against short line transients
- Continued availability during short duration power failures (a minimum of 30 minutes for a fully-configured system)
- Stable AC output voltage
- LCD display unit with ability to display key AC input/output parameters, alarm log, events log and programming functions
- Communications interface option for communicating a remote UPS shutdown through the serial port connection

## UPS limitations

While the UPS provides uninterrupted power to the XP array in the event of a power failure, once the battery runtime is exceeded, it shuts down, resulting in a loss of AC power to the array. The UPS does have the ability to communicate an oncoming shutdown to the host via the Silcon Triple Chassis. The host can then pass this message in-band to the XP array using the “xppf” program.

## Power requirements: single secondary input (primary offline)

The values in the table below are based on a worst-case voltage (rated voltage –10%) and a maximum configuration for disk control and disk array frames. A phase imbalance of 15% is also included in the calculation.

Input (Vac)	Single-Phase		Three-Phase	
	DKC	Each DKU	First DKU	Each Additional DKU
208	13.1 A	36.8 A	31 A	24.6 A
400	N/A	N/A	17.4 A	14.4 A

In a maximum XP1024 configuration (1 DKC and 4 XP1024 DKUs) the array requires 31 kVA.

If you intend to use HP Disk Array XP512 DKUs with your HP Disk Array XP1024, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for power requirements for these DKUs.

## Reference supplier information

American Power Conversion  
32 Fairgrounds Road  
West Kingston, RI 0289

Phone Numbers:

Technical Support & Product Info.  
1-800-800-4272

Corporate  
1-800-788-2208  
1-401-789-5735

To find out more about the recommended American Power Conversion UPS, travel to the APC web site:

[www.apcc.com](http://www.apcc.com)

You can also contact your HP service representatives for specific configuration needs for your area.

---

# Environmental requirements

The environmental specifications for operating your disk array must be satisfied prior to installation.

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for environmental requirements for these DKUs.

## Air conditioning ducts

Use separate computer room air conditioning duct work. If it is not separate from the rest of the building, it might be difficult to control cooling and air pressure levels. Duct work seals are important for maintaining a balanced air conditioning system and high static air pressure. Adequate cooling capacity means little if the direction humidity levels increase when the ducts are exposed to warm air.

## Humidity

Maintain proper humidity levels. High humidity levels cause galvanic actions to occur between some dissimilar metals. This eventually causes a high resistance between connections, leading to equipment failure.

---

<b>Caution</b>	<i>Low humidity contributes to undesirably high levels of electrostatic charges. This increases the electrostatic discharge (ESD) voltage potential. ESD can cause component damage during servicing operations.</i>
----------------	--

---

Static charges (voltage levels) occur when objects are separated or rubbed together. The voltage level of a static charge is determined by the following factors:

- Types of materials
- Relative humidity
- Rate of change or separation

Follow these precautions to minimize possible ESD-induced failures in your computer room:

- Install conductive flooring (conductive adhesive must be used when laying tiles).
- Use conductive wax if waxed floors are installed.
- Ensure that all equipment and flooring are properly grounded and are at the same ground potential.
- Use conductive tables and chairs.
- Store spare electric parts in antistatic containers.
- Maintain recommended humidity level and airflow rates.

Low humidity levels are often the result of the facility heating system and occur during the cold season. Most heating systems provide air with a low humidity level, unless the system has a built-in humidifier.

## **Dust and pollution control**

For trouble free operation, disk drives require a dust-free environment. The HP Disk Array XP1024 disk drives are protected from dust particles by mechanical air filters designed to trap large dust particles. Smaller particles can pass through some filters, and, over a period of time, can cause problems in mechanical parts. Small dust particles can be prevented from entering the computer room by maintaining its air conditioning system at a high static air pressure level.

## **Metallic particulate contamination**

Metallic particulates can be especially harmful around electronic equipment. This type of contamination may enter the data center environment from a variety of source, including but not limited to raised floor tiles, worn air conditioning part, heating ducts, rotor brushes in vacuum cleaners, or print component wear. Because metallic particulates conduct electricity, they have an increased potential for creating short circuits in electronic equipment. This problem is aggravated by the increasingly dense circuitry of electronic equipment.

Over time, very fine whiskers of pure metal can form on electroplated zinc, cadmium, or tin surfaces. If these whiskers are disturbed, they may break

off and become airborne, possibly causing failures or operational interruptions. For over 50 years, the electronics industry has been aware of the relatively rare but possible threat posed by metallic particulate contamination. During recent years, a growing concern has developed in computer rooms where these conductive contaminants are formed on the bottom of some raised floor tiles.

Although this problem is relatively rare, it may be an issue within your computer room. Since metallic contamination can cause permanent or intermittent failures on your electronic equipment, Hewlett-Packard strongly recommends that your site be evaluated for metallic particulate contamination before the installation of electronic equipment.

### **Temperature and humidity specifications**

When the disk array is operating, the recommended temperature range is 21°C to 24°C and recommended relative humidity range is (at 22°C) between 40 to 55 percent. The table below lists the full range of temperature, humidity, and vibration specifications for the HP Disk Array XP1024. The vibration and shock specifications apply to all three axes.

---

<b>Caution</b>	<i>No condensation in or around the HP Disk Array XP1024 should be observed under any conditions.</i>
----------------	---

---

<b>Specification</b>	<b>Operating<sup>1</sup></b>	<b>Nonoperating<sup>2</sup></b>	<b>Shipping and Storage<sup>3</sup></b>
Temperature (°C)	16 to 32	–10 to +43	–25 to +60
Relative humidity (%) <sup>4</sup>	20-80	8-90	5-95
Max wet bulb (°C)	26	27	29
Temperature deviation (°C/hour)	10	10	20
Vibration <sup>5</sup>	0.25 mm, 5-10 Hz  0.05 G, 10-300 Hz	2.5 mm, 5-10 Hz  0.5 G, 10-70 Hz  0.05 mm, 70-99 Hz  1.0 G, 99-300 Hz	0.5, 15 min. <sup>6</sup> at four most severe resonances between 5-200 Hz
Shock		8 G, 15 ms	Horizontal: <sup>7</sup> incline impact: 1.22 m/s  Vertical: <sup>8</sup> rotational edge: 0.15 m

1. Environmental specification for operating condition should be satisfied before the disk subsystem is powered on. Maximum temperature of 32°C should be strictly satisfied at the air inlet portion. The recommended temperature range is 21~24°C.
2. Nonoperating condition includes both packing and unpacking conditions unless otherwise specified.
3. On shipping/storage condition, the product should be packed with factory packing.
4. No condensation in and around the drive should be observed under any conditions.
5. The specifications apply to all three axes.
6. See ASTM D999-86, *Standard Methods for Vibration Testing of Shipping Containers*.



7. See ASTM D880-86, *Standard Methods of Incline Impact Test for Shipping Containers*.
8. See ASTM D775-80, *Standard Methods for Drop Test for Loaded Boxes*.

---

# Heat dissipation and power consumption

The table below describes the heat dissipation and power consumption of the HP Disk Array XP1024 in a maximum configuration:

Parameter	DKC	Each DKU	Full Array (4 DKUs & 1 DKC)
Power consumption (kVA)	3.09	6.94	30.85
Heat dissipation (kW)	2.94	6.40	28.53
BTUs per hour	10034	21843	97373
kcal per hour	2528	5504	24536

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for heat dissipation and power consumption information for these DKUs.

---

## Altitude

When operating the HP Disk Array XP1024, the maximum altitude is 3,000 meters. For nonoperational situations, the maximum altitude is 4,000 meters.

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for altitude specifications for these DKUs.

---

## Acoustics

Computer equipment and air conditioning blowers cause computer rooms to be noisy. Ambient noise level in a computer room can be reduced as follows:

dropped ceiling    Cover with a commercial-grade fire-resistant, acoustic rated, fiberglass ceiling tile.

sound deadening    Cover the walls with sound-deadening material.

removable partitions To be most effective, use foam rubber models.

The acoustic emission specifications for the HP XP1024 Disk Array are:

- 8.27 Bels (A) sound power
- 64 dB (A) sound pressure, operator position

If you intend to use HP Disk Array XP512 DKUs with your HP XP1024 Disk Array, see the *HP StorageWorks Disk Array XP512 Site Preparation Guide* for acoustic-emission specifications for these DKUs.

---

## Delivery space requirements

There should be enough clearance to move equipment safely from the receiving area to the computer room. Permanent obstructions, such as pillars or narrow doorways, can cause equipment damage.

Delivery plans should include the possible removal of walls or doors. The physical dimensions are summarized on [page 24](#).



---

## Upon receipt of your HP Disk Array XP1024

Your HP Disk Array XP1024 is shipped directly from HP. If your disk array is part of a system order, HP coordinates the shipment of equipment from all locations so that it arrives at your site at approximately the same time.

In some cases, factors beyond the control of HP can cause delivery delays. If you have not received your equipment within a two week period, notify your HP sales representative. The HP sales representative traces your order and expedites delivery.

**Caution** *Be sure to allow for size and weight in regards to placing the disk array at its installation site. Refer to “Dimensions” ([page 24](#)) for specific size and weight values.*

---

---

## Checking for shipping shortage and damage

As your disk array arrives, check the carrier's bill of lading carefully to ensure that all items shipped by HP are delivered. Notify the carrier immediately if there are any discrepancies or items missing.

Inspect all of the shipping containers for signs of damage before actually unpacking the equipment. Some typical signs of shipping damage are dents, scratches, cuts, or water marks. If any damage is found, note on the bill of lading that there is apparent damage subject to inspection. Arrange for the carrier's representative and a representative from Hewlett-Packard to be present when the item in question is unpacked.

Regardless of the circumstances, the HP CE takes immediate action to replace any damaged components without waiting for the settlement of claims.



---

## Unpacking the cartons

The equipment cartons can be unpacked at your convenience; it is your responsibility to have the equipment unpacked and moved to its proper installation location prior to the day of installation.

The DKC and DKU frames are very heavy. In a maximum configuration, the DKU weighs more than 1600 lb. It is recommended that three (3) people unpack and move this equipment to avoid injury.

Retain the packing list (invoice) for each carton that is to be unpacked and ensure that each item on the list can be accounted for. Contact your HP sales representative immediately if there are any missing items, or if the items are not the same as you ordered.

Leave the sealed cartons or packages of CDs, cables, and any other installation hardware intact for the HP CE. Your HP CE and HP ASE install and configure your disk array.



---

## Glossary

<b>ACA</b>	HP StorageWorks Asynchronous Continuous Access XP
<b>ACP</b>	Array control processor. The ACP handles the passing of data between the cache and the physical drives held in the DKUs. ACPs work in pairs, providing a total of eight SCSI buses. Each SCSI bus associated with one ACP is paired with a SCSI bus on the other ACP pair element. In the event of an ACP failure, the redundant ACP takes control. Both ACPs work together sharing the load.
<b>AL</b>	Arbitrated loop
<b>AL-PA</b>	Arbitrated loop physical address
<b>allocation</b>	The ratio of allocated storage capacity to total capacity as a percentage. “Allocated storage” refers to those logical devices (LDEVs) that have paths assigned to them. The allocated storage capacity is the sum of the storage of these LDEVs. Total capacity refers to the sum of the capacity of all LDEVs on the disk array.
<b>array group</b>	The number of physical disk drives contained in a RAID group. This number depends on the RAID configuration. For example, there may be two or four physical disks in a RAID1 group. There are four physical disks in a RAID5 group.
<b>ASE</b>	Application software engineer
<b>BC</b>	HP StorageWorks Business Copy XP. The software that lets you create and maintain up to nine copies of logical volumes on the disk array.

<b>BTU</b>	British thermal unit
<b>°C</b>	Degrees centigrade/Celsius.
<b>CA</b>	HP StorageWorks Continuous Access XP. The software program that lets you create and maintain duplicate copies of data, which are stored on a remote disk array.
<b>cache</b>	<p>Very high speed memory that is used to speed I/O transaction time. All reads and writes to the XP array family are sent to the cache. The data is buffered there until the transfer to/from physical disks (with slower data throughput) is complete.</p> <p>The benefit of cache memory is that it speeds I/O throughput to the application. The larger the cache size, the greater amount of data buffering that can occur and the greater throughput to the applications.</p> <p>The XP family of arrays supports 1-16 GB of cache memory. In the event of power loss, the cache boards are battery equipped to survive up to 48 hours.</p>
<b>CDE</b>	Common desktop environment.
<b>CE</b>	Customer engineer
<b>CFW</b>	Cache fast write
<b>CH</b>	Channel
<b>channel adapter (CHA)</b>	<p>Provides the interface between the disk array and the host system. Occasionally this term is used synonymously with the term channel host interface processor (CHIP).</p>
<b>channel host interface processor (CHIP)</b>	Synonymous with the term channel adapter (CHA)
<b>channel processor (CHP)</b>	The processors located on the channel adapter (CHA)

<b>CHPID</b>	Channel path identifier
<b>CKD</b>	Count key data
<b>command device</b>	A volume on the disk array that accepts CA or BC control operations which are then executed by the disk array.
<b>configuration file</b>	A file that defines BC/CA pair configurations.
<b>control unit</b>	<p>To organize the storage space attached to the DKC, you can group similarly configured logical devices (LDEVs) with unique control unit images (CUs). CUs are numbered sequentially.</p> <p>The XP256 supports up to four CUs. The XP512/48 supports up to 16 CUs. Each CU is able to manage up to 256 LDEVs. Therefore, to uniquely identify a particular LDEV requires both the CU number as well as the LDEV number.</p>
<b>CPU</b>	Central processing unit.
<b>CSA</b>	Canadian Standards Association
<b>CT</b>	Continuous Track. A maintenance support application.
<b>CU</b>	Control unit
<b>daemon</b>	A process that runs in the background and performs an operation at predefined times or in response to certain events.
<b>DASD</b>	Direct access storage device
<b>DCR</b>	Dynamic cache residency (also called Cache LUN XP)
<b>DE</b>	HP StorageWorks Data Exchange XP
<b>disk adapter (DKA)</b>	Synonymous with the term ACP
<b>disk controller unit (DKC)</b>	<p>The disk controller unit (DKC) is the array hardware that houses the channel adapters and service processor (SVP).</p>

**disk cabinet unit (DKU)**

The disk cabinet unit (DKU) is the array hardware that houses the array’s physical disks.

**DKC** Disk controller unit

**DKU** Disk cabinet unit

**disk recovery and restore unit (DRR)**

The unit located on the ACP that is responsible for data recovery and restoration in the event of a cache failure.

**disk group** The physical disk locations associated with a parity group.

**disk type** The manufacturing label burned into the physical disk controller firmware. In most cases, the disk type is identical to the disk model number.

**DMP** Dynamic multipathing

**DSF** Device support facilities

**DW** Duplex write

**DWL** Duplex write line

**EFS** The IRIX standard file system

**emulation modes** The logical devices (LDEVs) associated with each RAID group may have one of the following emulation modes. These modes change the behavior of the disks and determine their size.

OPEN-3: 2.46 GB

OPEN-9: 7.42 GB

OPEN-E: 13.56 GB

OPEN-L: 36 GB

**EPO** Emergency power-off

<b>ESCON</b>	Enterprise System Connection (the IBM trademark for optical channels)
<b>expanded LUN</b>	A logical unit number (LUN) is normally associated with only a single LDEV. The Logical Unit Size Expansion (LUSE) feature allows a LUN to be associated with 1 to 36 LDEVs. Essentially, LUSE makes it possible for applications to access a single large pool of storage. The LUSE feature is available when HP StorageWorks LUN Configuration Manager XP is installed.
<b>ExSA</b>	Extended serial adapter
<b>failover</b>	Suspending use of a failed component and continuing to operate using a healthy component in order to continue operations. Used in reference to clustered servers and HBA/Fibre Channel paths from hosts to arrays.
<b>FBA</b>	Fixed-block architecture
<b>FC</b>	Fibre Channel
<b>FC-AL</b>	Fibre Channel arbitrated loop
<b>FCP</b>	Fibre Channel Protocol
<b>FDR</b>	Fast dump/restore
<b>fence level</b>	A level for selecting rejection of a write I/O request from a host according to the condition of mirroring consistency.
<b>F/M</b>	Format/message
<b>ft.</b>	Foot or feet
<b>FWD</b>	Fast wide differential
<b>fx</b>	The IRIX disk utility
<b>GB</b>	Gigabytes
<b>GLM</b>	Gigabyte link module

<b>GUI</b>	Graphical user interface
<b>HA</b>	High availability
<b>HBA</b>	Host bus adapter
<b>HCD</b>	Hardware configuration definition
<b>host mode</b>	A port configuration parameter that describes what host will be connected to id. For example, mode 09 is used for AIX hosts.
<b>hot standby</b>	Using one or more servers to act in the case of a primary server failure.
<b>HP</b>	Hewlett-Packard Company
<b>H/W</b>	Hardware
<b>Hz</b>	Hertz
<b>IML</b>	Initial microprogram load
<b>in.</b>	Inches
<b>I/O</b>	Input/output (applies to an operation or device).
<b>IOCP</b>	Input/output configuration program
<b>instance</b>	An independent copy of RM. Instances are local or remote and can run on the same host.
<b>KB</b>	Kilobyte
<b>kcal</b>	Kilocalorie
<b>kg</b>	Kilogram
<b>km</b>	Kilometer
<b>kVA</b>	Kilovolt-ampere



<b>kW</b>	Kilowatt
<b>LAN</b>	Local area network
<b>lb.</b>	Pound
<b>LCP</b>	Local control port
<b>LD, LDEV</b>	Logical device. An LDEV is created when a RAID group is carved into pieces according to a selected host emulation mode (that is, OPEN-3, OPEN-8, OPEN-9, etc.). The number of resulting LDEVs depends on the emulation mode. The term LDEV is often used synonymously with the term volume.
<b>LED</b>	Light emitting diode
<b>local instance</b>	The RM instance currently being configured or the instance to which commands are issued.
<b>LPAR</b>	Logical partition
<b>LCP</b>	Link control processor or local control port
<b>LU</b>	Logical unit
<b>LUN</b>	Logical unit number. A LUN results from mapping a SCSI logical unit number, port ID, and LDEV ID to a RAID group. The size of the LUN is determined by the emulation mode of the LDEV, and the number of LDEVs associated with the LUN. For example, a LUN associated with two OPEN-3 LDEVs will have a size of 4,693 MB.
<b>LUSE</b>	Logical unit size expansion. A feature that allows you to create large LUNs by logically joining smaller LDEVs.
<b>LVI</b>	Logical volume image
<b>LVM</b>	Logical Volume Manager
<b>LVM mirror</b>	A disk duplicating function provided by Logical Volume Manager (LVM) (capable of triplicating disks).

<b>m</b>	Meters
<b>MB</b>	Megabytes
<b>MCU</b>	Main control unit
<b>mirroring consistency</b>	The consistency (usability) of data in a volume.
<b>mm</b>	Millimeters
<b>MP</b>	Microprocessor
<b>MPLF</b>	Multipath Locking Facility
<b>MR</b>	Magnetoresistive
<b>ms, msec</b>	Milliseconds
<b>mutual hot standby system</b>	Two servers that are poised to cover for each other if necessary.
<b>NHAS</b>	Novell High Availability Server
<b>node</b>	Logically, an environment where instances can be executed. Physically, a processor which is an element of a cluster system.
<b>NVS</b>	Nonvolatile storage
<b>OEM</b>	Original equipment manufacturer
<b>OFC</b>	Open Fibre Control
<b>OLM</b>	Optical link module
<b>ORM</b>	Online read margin
<b>OS</b>	Operating system
<b>PA</b>	Physical address

<b>PA</b>	HP StorageWorks Performance Advisor XP
<b>parity group</b>	A parity group is a mode of disk operation and configuration. It is synonymous with the term RAID group.
<b>partition</b>	Dividing a specific physical disk according to the HP-UX kernel or device driver layer into two or more areas, to act as if there are two or more physical disks.
<b>path</b>	Path and a LUN are synonymous. Paths are created by associating a port, a target, and a LUN ID with one or more LDEVs.
<b>PC</b>	Personal computer
<b>PCI</b>	Power control interface or peripheral component interconnect
<b>port</b>	<p>The number of supported ports on an XP disk array is dependent upon the number of supported I/O slots and the number of ports available per I/O adapter.</p> <p>Ports are named based upon their port group and port letter. Examples of port names include CL1-A through CL1-R and CL2-A through CL2-R (the letters I and O are skipped).</p>
<b>P-P</b>	Point-to-point
<b>PS</b>	Power supply
<b>P-VOL</b>	Primary or local volume (BC and CA). The volume that contains data to be copied to a secondary volume (S-VOL).
<b>R&amp;S</b>	Russellstoll
<b>RAID</b>	Redundant array of independent (sometimes cited as inexpensive) disks
<b>RAID Group</b>	A mode of disk operation and configuration. RAID configurations include RAID-1 and RAID-5. Configurations vary in the number of bits used in data/parity encoding, mirroring, and striping features. You may occasionally see the term <i>parity group</i> used synonymously with RAID group.

<b>RAM</b>	Random access memory
<b>RC</b>	HP StorageWorks Remote Control XP. A software application that lets you manage arrays from a dedicated remote console PC.
<b>RCP</b>	Remote control port
<b>RCU</b>	Remote control unit
<b>remote instance</b>	The instance to which the local instance communicates as configured in the <b>HORCM_INST</b> section of the RM instance configuration file.
<b>RISC</b>	Reduced instruction set computer
<b>RM</b>	HP StorageWorks RAID Manager XP. A software application that permits command line or script base BC and CA operations.
<b>RMC</b>	Remote console
<b>RM instance configuration file</b>	A file that defines the link between a volume and an RM instance. This file consists of four sections: <b>HORCM_MON</b> , <b>HORCM_CMD</b> , <b>HORCM_DEV</b> and <b>HORCM_INST</b> .
<b>R-SIM</b>	Remote service information message
<b>R/W, r/w</b>	Read/write
<b>SAM</b>	HP-UX System Administration Manager
<b>script file</b>	A file containing a shell script
<b>SCSI</b>	Small computer system interface
<b>sec.</b>	Second
<b>seq.</b>	Sequential
<b>SGI</b>	Silicon Graphics Incorporated

<b>shell script</b>	A command sequence executed by a UNIX shell.
<b>Sidefile</b>	An area of cache used to store the data sequence number, record location, record length, and queued control information before transmit over the ESCON link.
<b>SIM</b>	Service information message
<b>SMIT</b>	System Management Interface Tool
<b>SMS</b>	System managed storage
<b>SNMP</b>	Simple Network Management Protocol
<b>special files</b>	Files that indicate physical devices and are different from regular files in the UNIX system. The functions of the device drivers (that is, access to system peripherals) become available through these special files.
<b>SR</b>	Sales representative
<b>SSID</b>	Storage subsystem identification
<b>SVP</b>	Service processor. The notebook PC built into the DKC. The SVP provides a direct interface into the disk array. <i>SVP use is reserved for the HP CE.</i>
<b>S-VOL</b>	Secondary or remote volume (BC and CA). The copy volume that receives the data from the primary volume.
<b>takeover</b>	The actions of a standby server that takes over processing from the previously active server.
<b>TB</b>	Terabyte
<b>TCP/IP</b>	Transmission control protocol/Internet protocol
<b>TID</b>	Target ID
<b>TPF</b>	Transaction processing facility
<b>UCB</b>	Unit control block

<b>UL</b>	Underwriters' Laboratories
<b>VDE</b>	Verband Deutscher Elektrotechniker
<b>VOLID</b>	Volume ID
<b>volser</b>	Volume serial number
<b>volume</b>	Synonymous with LDEV
<b>VSC</b>	Volume Size Customization. A feature that allows you to create small LDEVs from a large LDEV.
<b>XDF</b>	Extended distance feature (for ExSA channels)
<b>XF</b>	IRIX extended file system
<b>XLV</b>	Extended logical volume manager
<b>XRC</b>	Extended Remote Copy